

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

| Item | When to initialize | Reference |
|-----------------------------------|--|-----------|
| Power back door (if equipped) | <ul style="list-style-type: none">• After reconnecting or changing the battery• After changing a fuse | P. 55 |
| Maintenance data (U.S.A. only) | After the maintenance is performed | P. 471 |
| Tire pressure warning system | <ul style="list-style-type: none">• When changing tire pressure (such as when changing traveling speed, load weight, etc.)• When changing the tire size | P. 500 |